


Installation Instructions – EX[®] 6 & 59 series




Cut cable squarley.




Using a fixed blade prep tool in good condition, prepare cable to 1/4" x 1/4" dimensions. Use edge of tool if no stop.

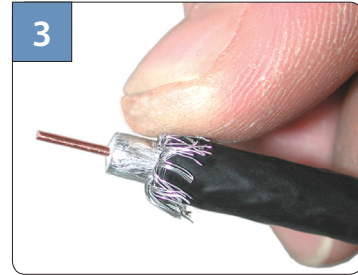

Fold back braid. If Trishield or Quadshield remove additional foil layer and fold back remaining braid.

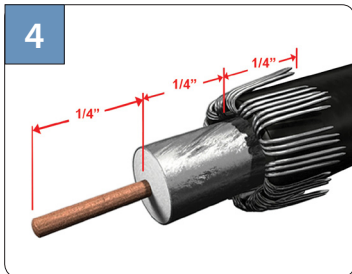


Cable is prepared to proper dimensions

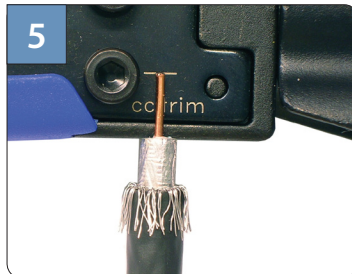

Ensure cable is prepared to 1/4" x 1/4" dimensions. Use gauge on VT tool to recheck center conductor.



Guide center conductor and dielectric into post. Insert cable into connector until dielectric is flush within post.

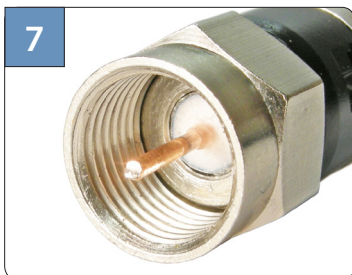

Dielectric is flush within the post.



Properly seat connector and compress fully.



Tighten connector to recommended torque.



EX6



EX6XL



EX59



EX59XL

Part Numbers

- EX6
- EX6XL
- EX59
- EX59XL

Description

EX[®] Series Universal compression connectors for 6 & 59 series cable