


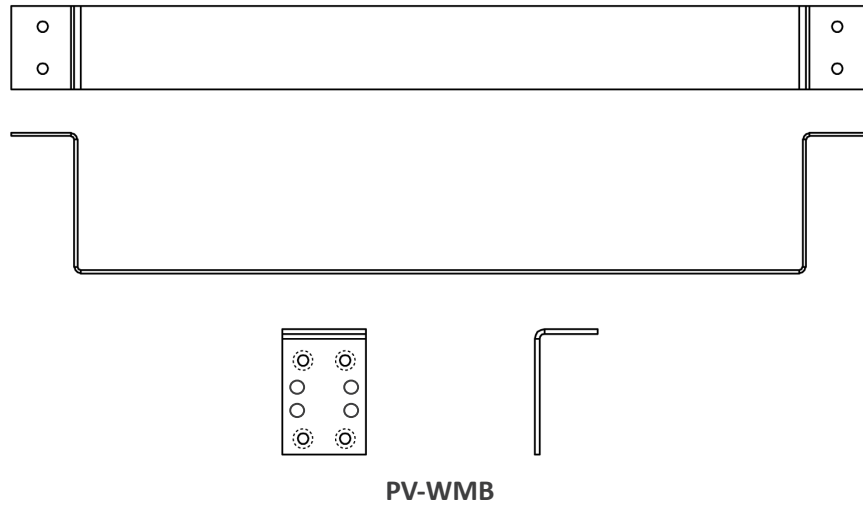

PV-WMB

For use with P80/P90/V80 Models

User & Installation Manual



Kit Contents

Assembly Components:

- (1) Wall Bracket
- (2) Mounting Brackets

Wall Mount Installation Instructions

Step 1


Determine Location: Select appropriate location on wall. Consider cable routing and length.

Step 2

Mark Hole Positions: Hold Wall Bracket in position and mark 8 hole positions with pencil.


Step 3a

Install Drywall Anchor: Install one drywall anchor at each hole mark. Using a #2 Phillips head screwdriver press the anchor into the drywall while turning clockwise until it is seated flush with the wall.

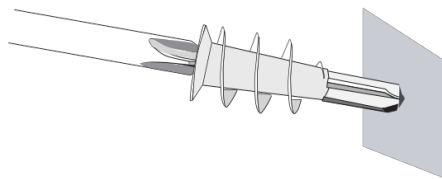

Step 3b

Install 4 Screws: Leave 1/4" of each screw out of wall.

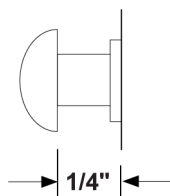

Step 4

Install Equipment with Brackets: Slide equipment into Bracket Assembly and install brackets into screw holes.

